

Waste Acceptance Procedure

All incoming waste is subject to documented waste acceptance procedures that have been approved by the EPA. Wastes are delivered by hauliers that have an up to date Waste Collection Permits. Waste is not accepted from either members of the public, or waste companies that do not have a contract with FHR.

All deliveries are weighed on the incoming weighbridge and the origin of the waste, the relevant List of Waste code and the weight are recorded. The driver is then directed to the intake area, where the wastes are off-loaded in a designated tipping area. The wastes are visually checked and any load deemed unsuitable is moved to a designated quarantine area for a more detailed inspection. If the materials are found to be unsuitable they are either returned to the customer, or sent to an appropriate waste management facility.

*For inspection purposes only.
Consent of copyright owner required for any other use.*